



Create·A·Sticker® Sticker Maker


XYRON®
User Guide

Fast, clean, fun.

Contents

Features _____	04
Product Overview _____	05
Getting Started _____	07
Cartridge Guide _____	08
How to Unload/Load Cartridge _____	09
Application Use _____	11
Helpful Tips _____	12

Features

Mess-free, refillable sticker maker.




Make stickers in seconds.

This non-electric sticker maker uses a patented process that requires zero warm-up, cool-down, or dry time.



Stay clean.

Stop dealing with messy adhesives. Get professional results and keep work surfaces, hands, and projects clean.

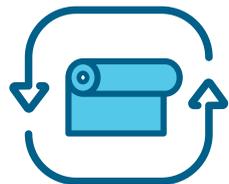

Switch cartridges fast.

Drop-in cartridges in Permanent and Repositionable Adhesive make it a cinch to refill or switch.

Product Overview

machine front



Product Overview

machine back



Getting Started

Preloaded with 10 feet of permanent adhesive.



1 Feed.

Feed your item into the middle of the machine on the feed guide.



2 Turn.

Turn the knob clockwise while you continue to feed the item completely through.



3 Peel.

Use the tear bar to cleanly tear from the machine, then peel your sticker.

Cartridge Guide

Create•A•Sticker® accepts 5" cartridges.



Permanent Adhesive

Apply for a secure, reliable bond.

#AT1505-18



Repositionable Adhesive

Lift and reposition items easily.

#AT1506-18

Acid-free. Non-Toxic. Cartridges sold separately.

How to Unload/Load Cartridge



1 Open cartridge compartment by pushing button and lifting the lid.



2 Pull cartridge up and out of the machine.



3 Drop the cartridge into the machine using the internal track as a guide. The label on the cartridge should be facing you.



4 Close the lid by pressing down until it clicks into position.

Making made easy.

Application Use



Permanent Adhesive



- 1 After tearing from machine, peel sticker from paper backing.



Repositionable Adhesive



- 2 Apply sticker to your project. Permanent Adhesive will lock in place and Repositionable Adhesive can be moved multiple times.

Helpful Tips

General Tips:

- For best results, turn handle slowly.
- Use items that are 1/8" thick or less.
- Arrange multiple items on feed guide to maximize cartridge use.
- Clean rollers with isopropyl alcohol as needed.
- Store your machine and cartridges in a cool, dry place.
- Use with a variety of materials: paper, cardstock, vellum, fabric, ribbon, photos, and tissue paper.
- When feeding multiple items, do not overlap to ensure edge-to-edge coverage.
- Remove excess adhesive with your finger or Xyron® Adhesive Eraser (sold separately).
- Before inserting your item, test a few inches to ensure no wrinkles are present.

Fabric Tips:

- Wash sizing from fabric.
- For items that will be washed, stitch after adhering.
- For best results, use Permanent Adhesive.



www.xyron.com

