



Xyron Creative Station Lite® Multi-Use Applicator


XYRON®
User Guide

Awesomely simple.

Contents

Features _____	04
Product Overview _____	05
Getting Started _____	07
Cartridge Guide _____	08
How to Unload/Load Cartridge _____	09
Application Use _____	12
Helpful Tips _____	15


Features

All-in-one laminator, sticker and magnet maker.



Make what you want.

Easily transform almost anything with Permanent and Repositionable Adhesive, Laminated Adhesive, Two-Sided Laminate, and Laminated Magnet.

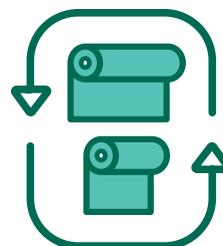

Switch functions fast.

Quickly change drop-in cartridges at any time without hassle. Uses both 5" and 3" continuous roll cartridges to help minimize waste and maximize flexibility.



Stay clean.

Ditch messy adhesives for professional results, all while keeping work surfaces, hands, and projects clean.



Save time.

Get immediate results anywhere with processes that don't require warm-up, cool-down or dry time.


Product Overview

machine front




Product Overview

machine back and interior

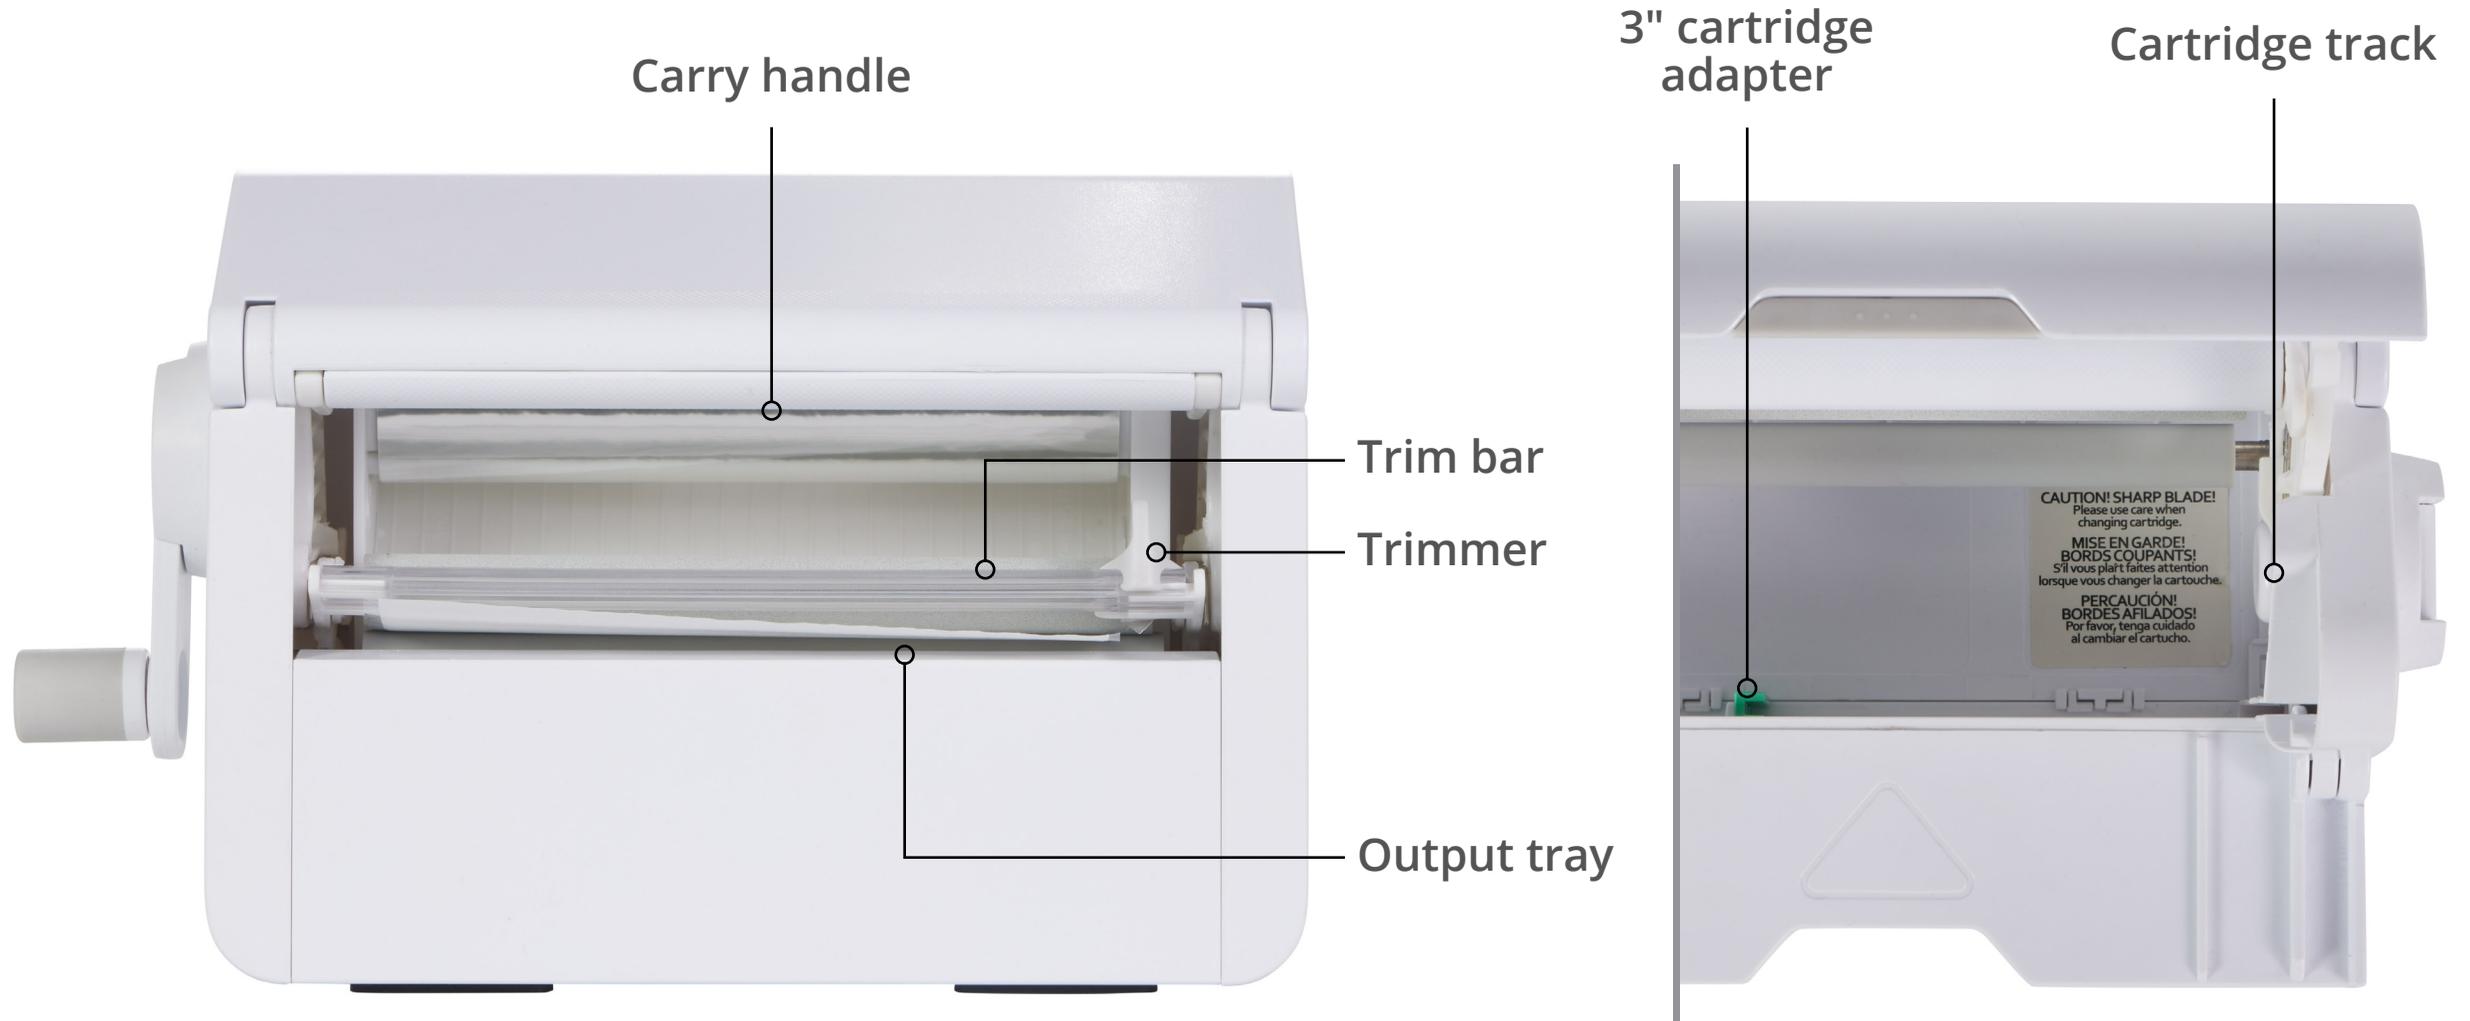

Getting Started

Preloaded with 18 feet of permanent adhesive.

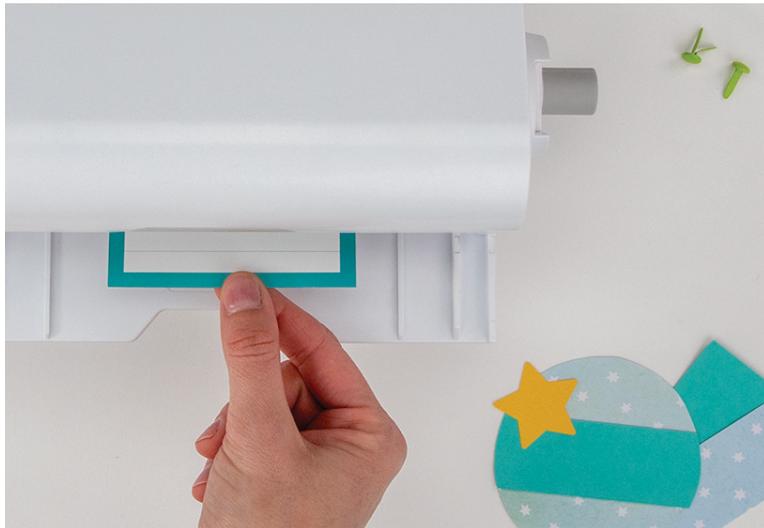

1 Feed.

Feed your item into the machine on the feed tray using the alignment guides.



2 Turn.

Turn the handle clockwise while you continue to feed the item completely through.



3 Trim.

Press down and slide trimmer to cleanly cut. Remove clear film and peel your sticker.

Cartridge Guide

Xyron Creative Station Lite® accepts 5" and 3" cartridges.



Permanent Adhesive

Apply for a secure, reliable bond.

5" #AT1605-18 | 3" #624741



Repositionable Adhesive

Lift and reposition items easily.


5" #AT1606-18



Laminated Adhesive

Protect and permanently adhere.

5" #5102-08-00ML

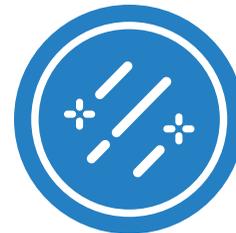

Two-Sided Laminate

Preserve and protect documents.

5" #DL1601-18



Laminated Magnet

Create durable magnets.

5" #LM1601-7

Acid-free. Non-Toxic. Cartridges sold separately.

How to Unload/Load Cartridge



- 1 Open cartridge compartment by pushing button and lifting the lid.



- 2 Pull cartridge up and out of the machine.



- 3 Drop the cartridge into the machine using the internal track as a guide. The label on the cartridge should be facing you.

continued on next page

How to Unload/Load Cartridge

continued




- 4** Place material flap between the 2 rollers.



- 5** Close the lid by pressing down until it clicks into position.

For 3" Cartridges

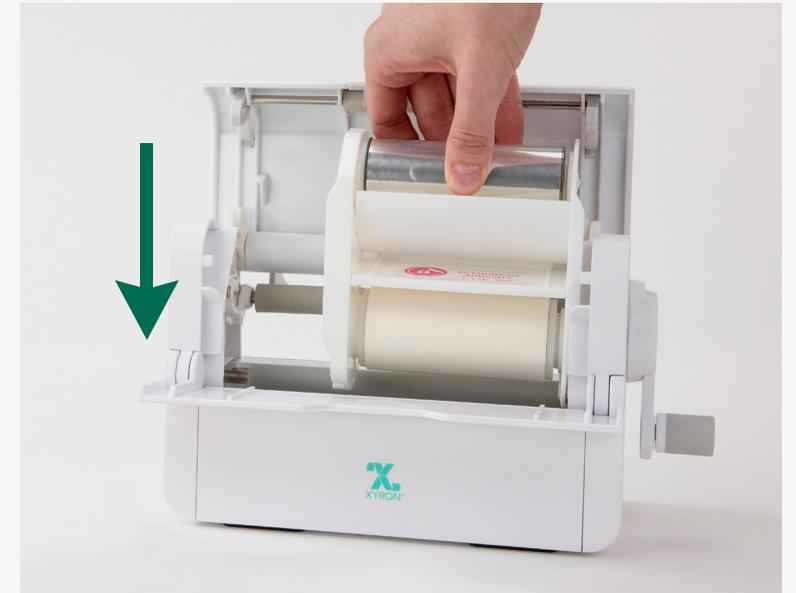

Follow steps 1 and 2. Proceed with step 3 using the 3" cartridge adapter and the internal track as guides.

Making made easy.

Application Use



Permanent Adhesive*




Repositionable Adhesive



1 After trimming from machine, rub item to ensure full adhesive transfer.



2 Remove clear film.

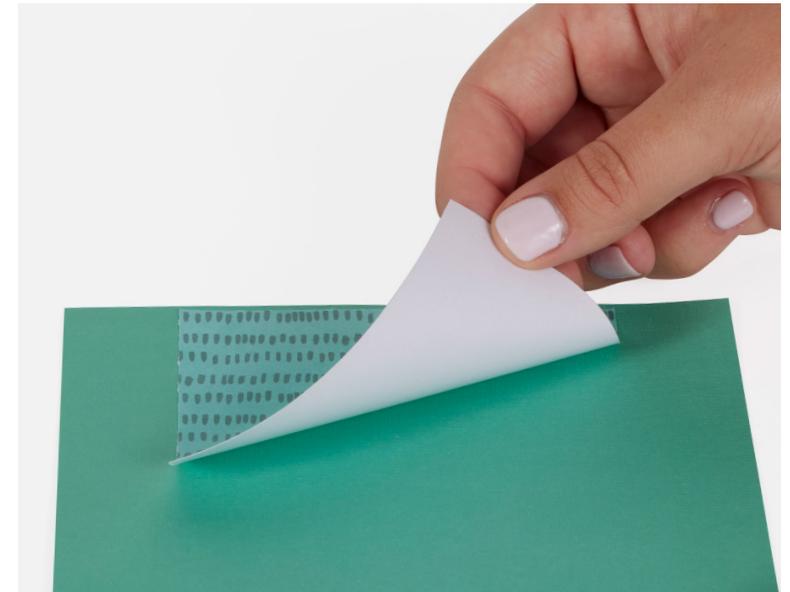

3 Peel sticker from paper backing and apply.


*only application with 3" cartridge

Application Use

continued



Laminated Adhesive

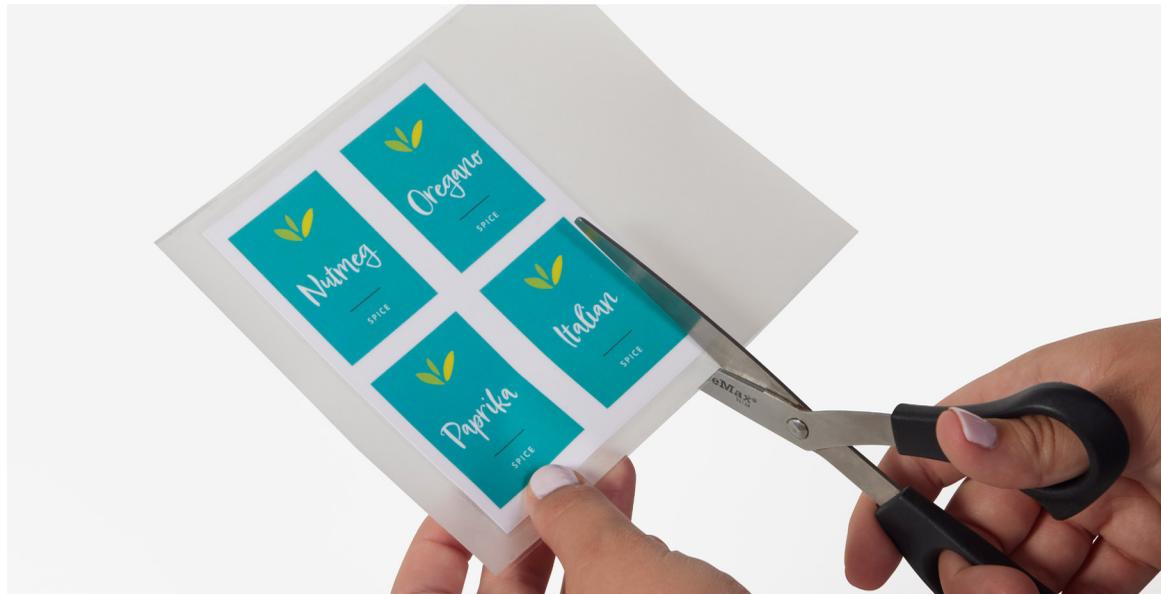

1 After trimming from machine, cut item right up to the edge. Laminate will not peel.

2 Peel laminated sticker from paper backing and apply.

Application Use

continued



Two-Sided Laminate



Laminated Magnet



- 1 After trimming from machine, cut item right up to the edge. Laminate will not peel.

Helpful Tips

General Tips:

- For best results, turn handle slowly.
- Use items that are 1/8" thick or less.
- Arrange multiple items on feed tray to maximize cartridge use.
- Clean rollers with isopropyl alcohol as needed.
- Store your machine and cartridges in a cool, dry place.
- If your handle turns but nothing is coming out, be sure your lid is closed.
- Use a variety of materials: paper, cardstock, vellum, canvas, burlap, fabric, ribbon, twill, twine, craft foam, tissue paper, felt, cork, thin wood and acrylic, photos, paper flowers, thin metal sheets, and newspaper.

Fabric Tips:

- Wash sizing from fabric.
- For items that will be washed, stitch after adhering.
- For best results, use Permanent Adhesive.

Permanent and Repositionable Adhesive:

- When feeding multiple items, do not overlap to ensure edge-to-edge coverage.
- Remove excess adhesive with your finger or Xyron® Adhesive Eraser (sold separately).

Two-Sided Laminate:

- **NOT recommended for one-of-a-kind items.**
- Before inserting your item, test a few inches to ensure no wrinkles are present.
- If a wrinkle occurs, fold a piece of cardstock to 4" x 4" and run it through the center of the machine until you see the laminate smooth out.



www.xyron.com

