

Xyron® X Sticker Maker



User Guide

Do more with less.

Contents

Features _____	04
Product Overview _____	05
Getting Started _____	06
Cartridge Guide _____	07
How to Unload/Load Cartridge _____	08
Application Use _____	10
Helpful Tips _____	11

Features

Refillable sticker maker.



Don't wait.

Zero warm-up, cool-down, or dry-time.



Stay clean.

Ditch messy adhesives and keep surfaces, hands, and projects clean.



Switch cartridges fast.


Easily slide-in Permanent and Repositionable Adhesive cartridges.

Product Overview



Getting Started

Preloaded with 20 feet of permanent adhesive.

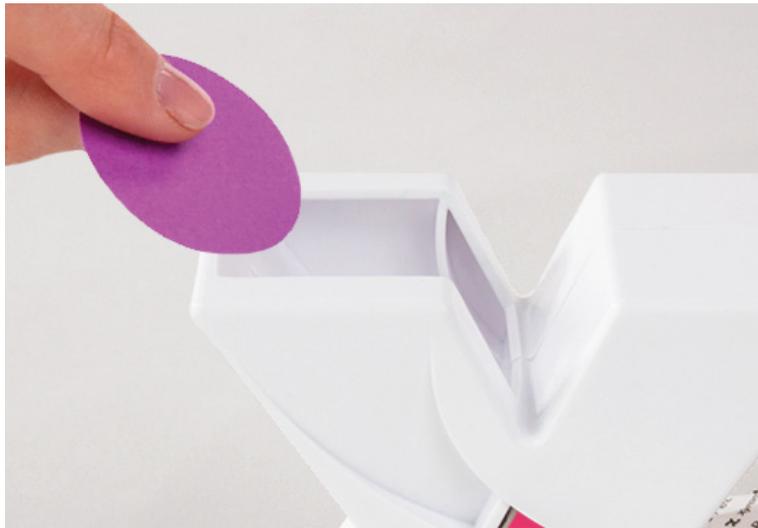

1 Feed.

Feed your item into the top opening of the sticker maker.



2 Pull.

Pull backing while you continue to feed the item completely through.



3 Peel.

Use the tear bar to cleanly tear from the sticker maker. Remove clear film and peel your sticker.

Cartridge Guide

Xyron® X Sticker Maker accepts 1.5" cartridges.



Permanent Adhesive

Apply for a secure, reliable bond.

#AT155-20





Repositionable Adhesive

Lift and reposition items easily.

#AT156-20

Acid-free. Non-Toxic. Cartridges sold separately.

How to Unload/Load Cartridge

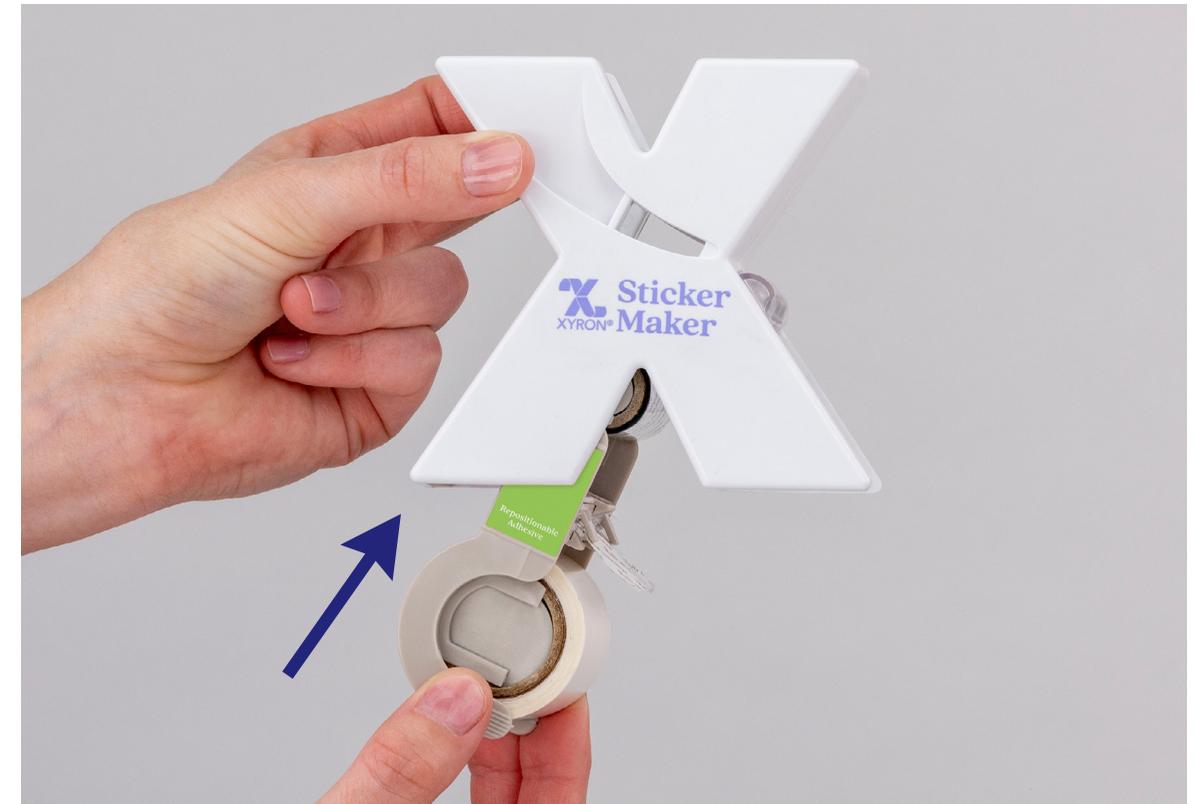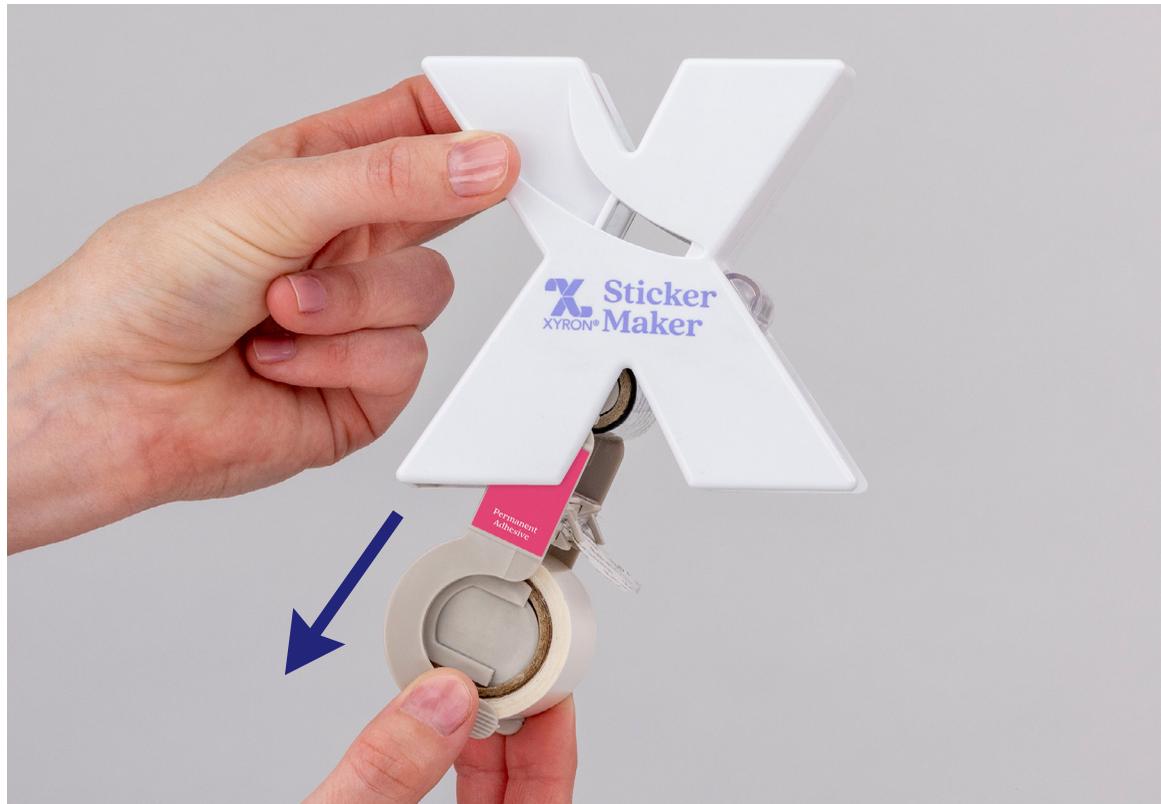

1 Press cartridge tabs and pull out of the sticker maker.

2 Slide the cartridge into the sticker maker until it clicks into position.

Making made easy.

Application Use




Permanent Adhesive




Repositionable Adhesive



1 After tearing from the sticker maker, rub item to ensure full adhesive transfer.

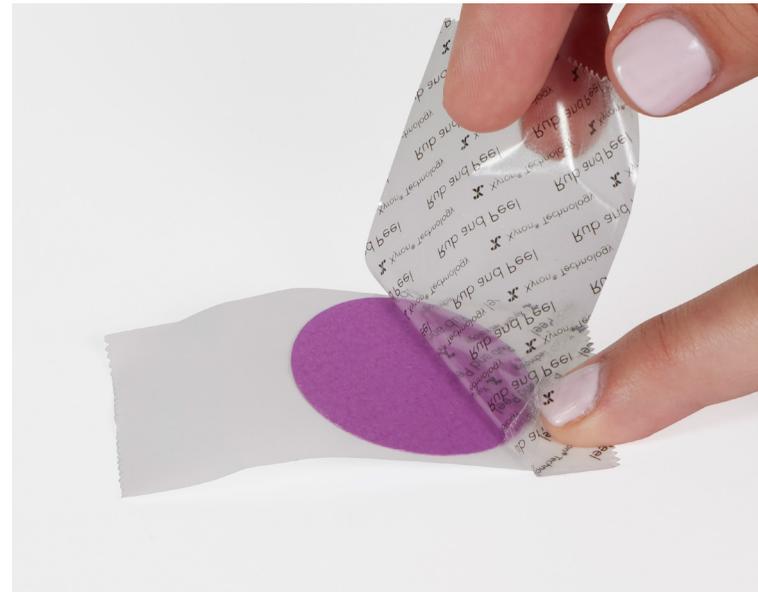

2 Remove clear film.

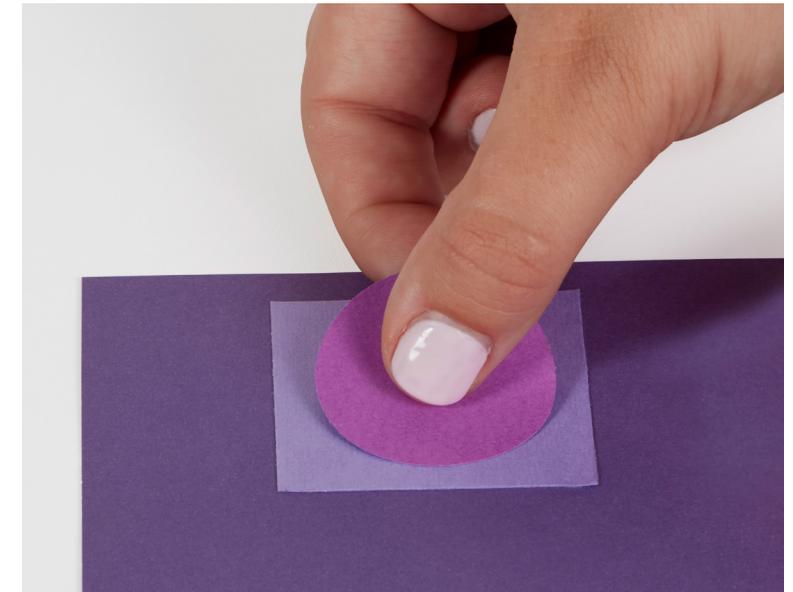

3 Peel sticker from paper backing and apply.

Helpful Tips

General Tips:

- For best results, pull item through slowly.
- Use items that are 1/8" thick or less.
- Feed and pull multiple items before tearing to maximize cartridge use.
- When feeding multiple items, do not overlap to ensure edge-to-edge coverage.
- Store your sticker maker and cartridges in a cool, dry place.
- Use a variety of materials: paper, cardstock, vellum, canvas, burlap, fabric, ribbon, twill, twine, craft foam, tissue paper, felt, cork, wood, buttons, acrylic, photos, thin paper flowers, and newspaper.
- Remove excess adhesive with your finger or Xyron® Adhesive Eraser (sold separately).

Fabric Tips:

- Wash sizing from fabric.
- For best results, use Permanent Adhesive.



www.xyron.com

